

Publication 84-2006-001
Revision A, June 1988

CR™ 1212
Graphics Tablet

Changing the Configuration

Restricted Distribution

Summagraphics Corporation
777 State Street Extension
Fairfield, CT 06430 U.S.A.

Phone: (203) 384-1344
Telex: 96-4348

COPYRIGHT

This manual and the software described in it are copyrighted with all rights reserved. (Software, in the context of this copyright, can be in any form, including firmware.) Under the copyright laws, this manual or the software may not be copied, in whole or in part, without the written consent of Summagraphics, except in the normal use of the software or to make a backup copy. The same proprietary and copyright notices must be affixed to any permitted copies as were affixed to the original. This exception does not allow copies to be made for others, whether or not sold, but all of the material purchased (with all backup copies) may be sold, given or loaned to another person. Under the law, copying includes translating into another language or format. You may use the software on any computer owned by you, but extra copies cannot be made for this purpose.

Copyright Summagraphics Corporation 1986, 1987, 1988
All Rights Reserved.
Summagraphics Corporation
777 State Street Ext.
Fairfield, Connecticut
06430
U.S.A.

TRADEMARKS

Summagraphics, MM, Bit Pad, and CR are trademarks of Summagraphics Corporation.

Caution: Performing the procedure described in this document is done at your own risk. We take no responsibility for any damage that could occur.

The CR 1212 defaults to a certain operational configuration, baud rate, and report rate. The operational configurations are Bit Pad One, Bit Pad Two, and CR. The baud rates are 9600 and autobaud. The report rates are 72 rps and 110 rps.


In brief, to change these defaults:

1. Disassemble the tablet.
2. Change the jumper caps.
3. Reassemble the tablet.

Detailed instructions follow.


Disassembling the Tablet

1. Ensure that the tablet is turned off and all cables, clips, etc. are removed.
2. Turn the tablet upside-down on a clean, smooth surface that will not mar it. The bottom cover should be facing you.
3. Using a Phillips head screwdriver, remove the three cover screws. (A magnetic screwdriver is helpful because the screws are recessed.) *Do not press down hard on the screws. Too much pressure can strip the screw threads.* Lay the screws aside.

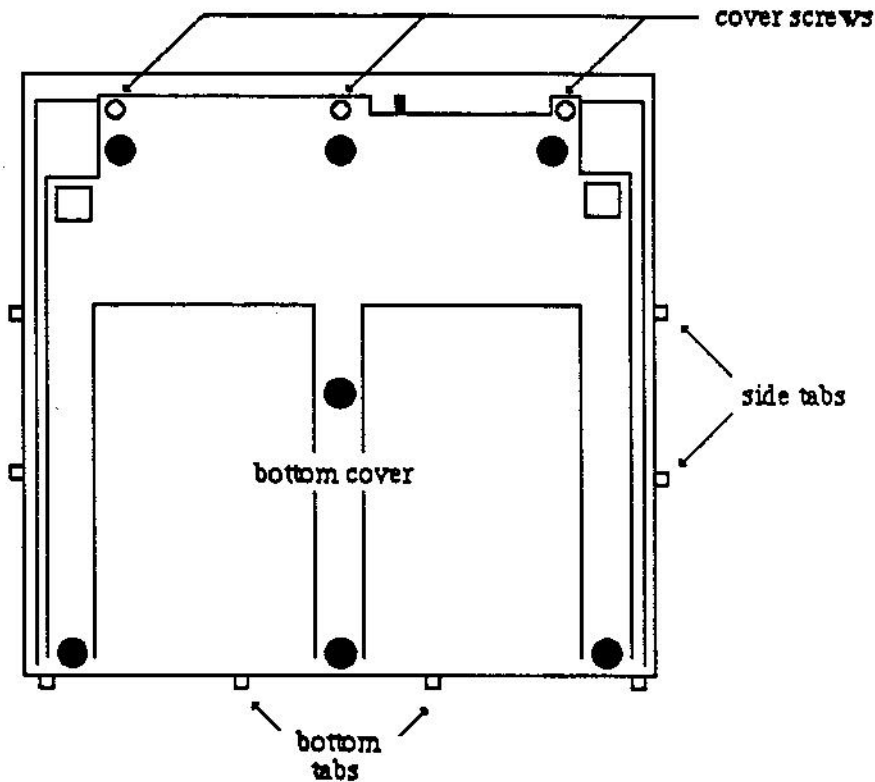


Notice that the bottom and top covers are held together by tabs on the bottom cover.


2. Turn the tablet on its side. Raise the tablet a few inches from the work surface. Rap it firmly on the work surface. This shifts the bottom cover enough to loosen the tabs from their slots at the upper edge.

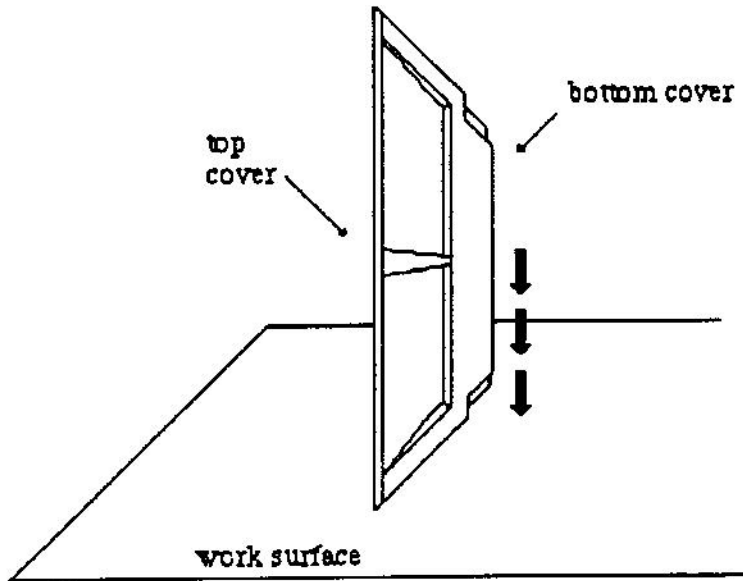

3. Lay the tablet right-side-up on the work surface. Grasp the tablet edge that you just loosened in Step 2. With your thumbs on the top cover and your finger tips on the edge of the top cover, pull the top cover up until the tabs snap loose.

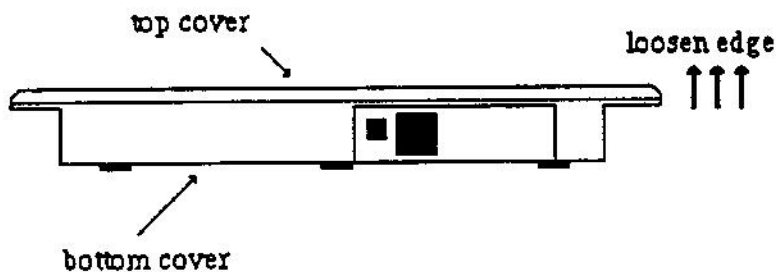


4. Turn the tablet on the other side and perform Steps 2 and 3. The top and bottom covers should pull away easily. If not, lay the tablet upside-down on the work surface. Pull the back cover up and out from the bottom edge.

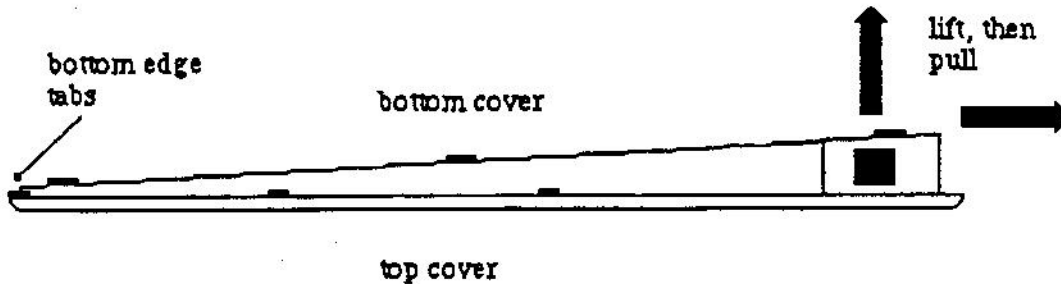

5. Lay the top cover aside with the green plate facing up. (The plate is held onto two cover posts by black rubber grommets. Ensure that these are not lost.)
6. Lay the bottom cover right-side-up, which is with the cavity facing you. The printed circuit board is underneath the metal shield. Using a Phillips head screwdriver, remove the center screw. Lay it aside. (Notice that this screw is different from the others. It is shorter and thicker. *Do not mix it up with the other screws.*) Lift the shield off the board and set aside.
7. Lift the printed circuit board out and up, making sure that the On/Off switch clears the cabinet. This may require wiggling the board a little.

8. The locations of jumpers W5, W7, W8, and W9 are shown here:

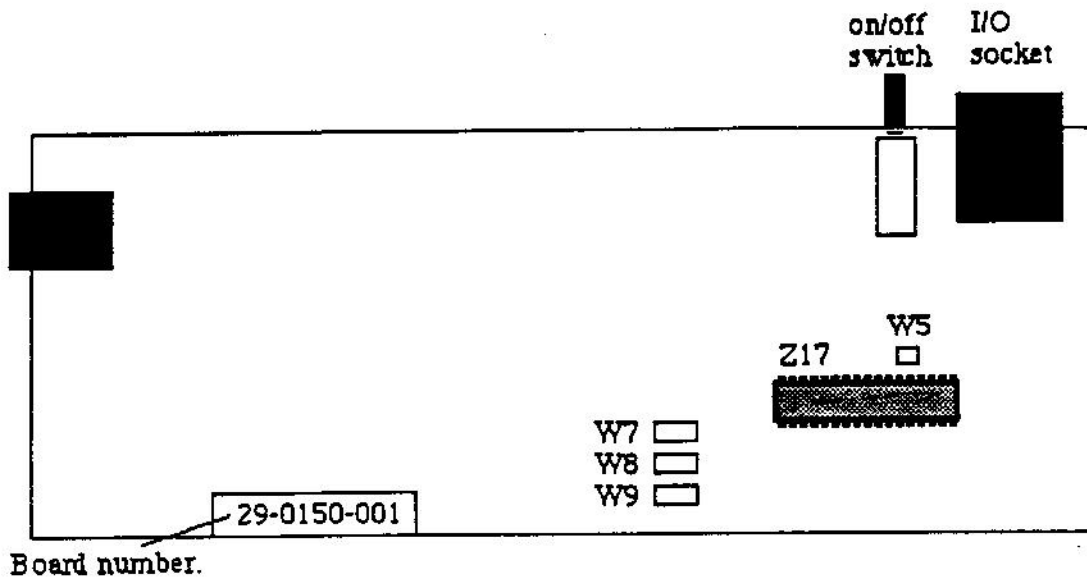

Caution: Do not change the other jumpers on the board.


Changing Jumpers

Change the jumper caps as you wish.

Configuration	Jumper W5	Jumper W7	Jumper W8	Jumper W9
100 reports per second	cap removed	---	---	---
72 reports per second	cap attached	---	---	---
CR configuration	---	cap removed	cap removed	---
Bit Pad One configuration	---	cap removed	cap attached	---
Bit Pad Two configuration	---	cap attached	cap attached	---
Baud rate 9600	---	---	---	cap removed
Autobaud	---	---	---	cap attached

The jumper caps are small black plastic sleeves, open at two ends. Spare caps are provided. They are stuck on one of the jumpers' pins.


To remove a cap, pull straight up. To attach a cap, push straight down onto the two jumper pins. Both ends of the cap are the same, so it doesn't matter which way you attach it.

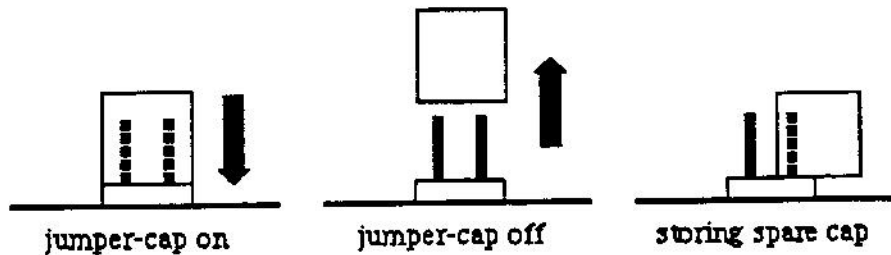

Hint: A cap is "attached" when it straddles both pins. It is "removed" when it is on no pins or on only one pin. Therefore, a handy way of storing a spare cap is to stick it on only one jumper pin.


Reassembling the Tablet

1. Turn the printed circuit board over so that the component side is not facing you. Holding the board at an angle, slide the On/Off switch through the cover hole. Position the board so that the pointed posts are visible through the holes. Gently push down on the board until it seats on the pointed posts and the standoffs.

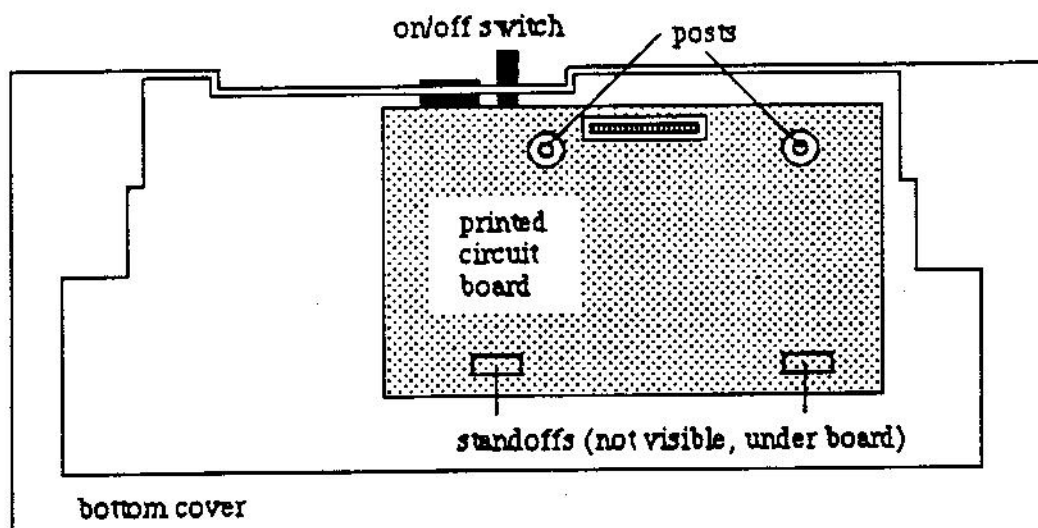


The board should slip into this position very easily. If at any time you feel that you had to force it, then it is not seated properly. Wiggle the board until it drops easily onto the standoffs.

2. Lining up the holes, replace the metal shield. Insert the shield screw in the center hole and gently tighten it. *Do not over tighten.*

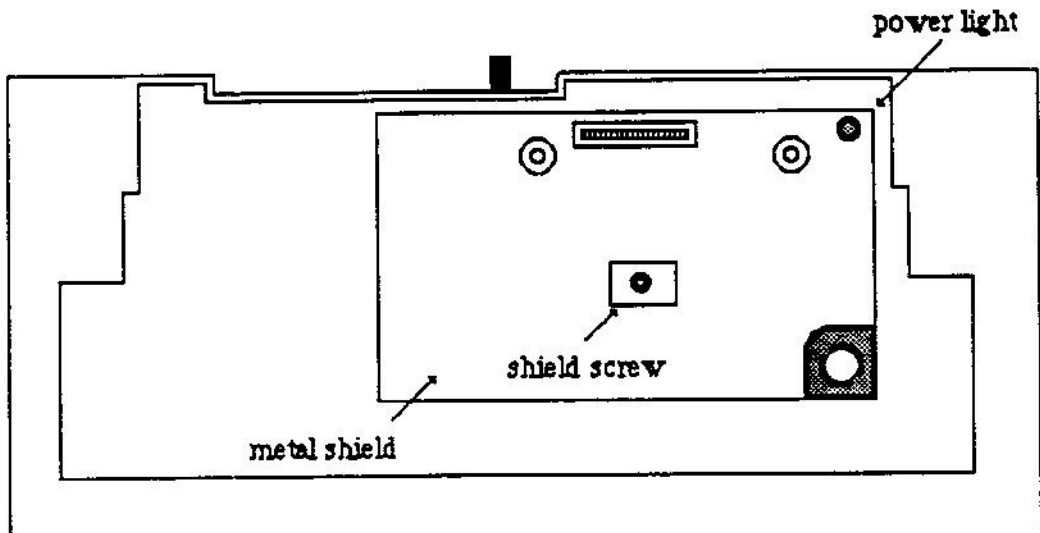


3. Lay the tablet top cover upside-down on the work surface as shown below.

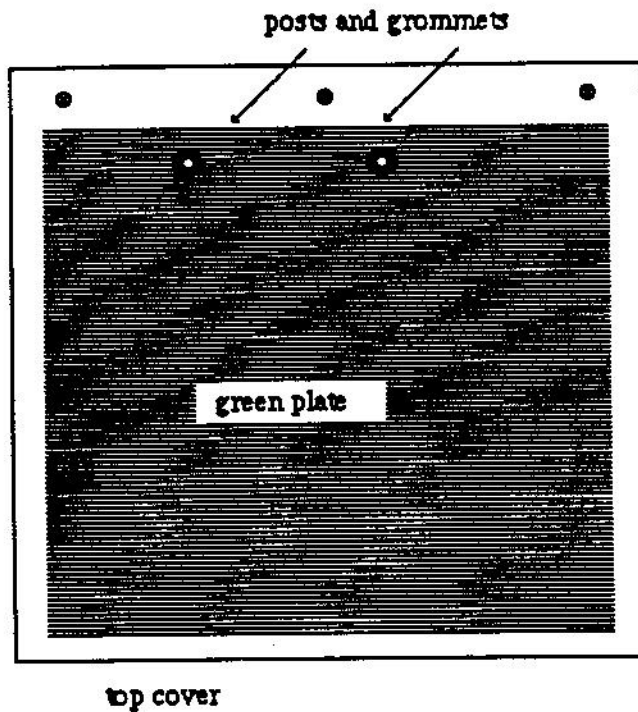

Ensure that the two posts are protruding through the green plate and the two rubber grommets are holding it in place.

4. Hold the bottom cover upside-down over the top cover. Slide the bottom edge of the bottom cover into the top cover so that the tabs fit into the slots.

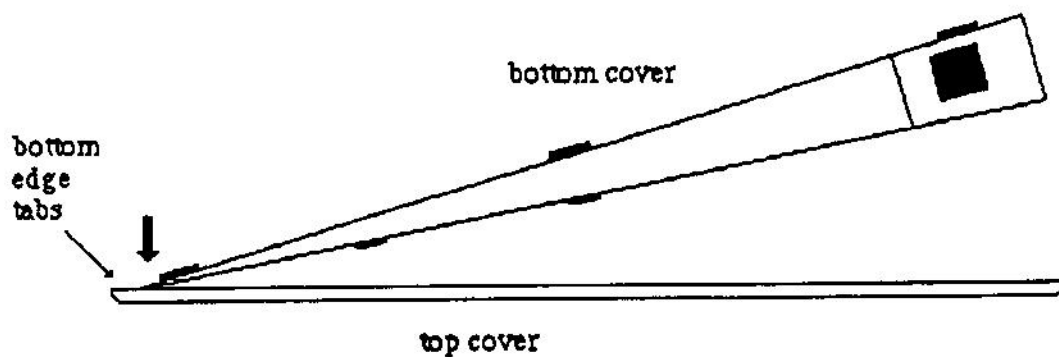

5. Snap the bottom cover down against the top cover. The bottom and side tabs should be seated in the slots