

Super L VI™ Quick Start

Contents

Verify that your Super L VI package includes the following:

- ✓ Super L VI digitizing tablet
- ✓ Transducer (corded or cordless pen, 4-button cursor, or 16-button cursor)
- ✓ USB Cable
- ✓ CD with drivers and diagnostics (varies with configuration)
- ✓ *Super L VI User's Guide* (on CD)
- ✓ *Super L VI Quick Start* (this document)
- ✓ Registration Card

Note

Check the insert in the large packing box for some of the items listed here.

Optional Equipment

- ✓ RS232 cable with 9-pin connector for serial connection
- ✓ Power supply – required only for a serial installation
- ✓ Universal Mounting Brackets
- ✓ Plan Holder
- ✓ Accessory Tray
- ✓ Table Feet
- ✓ Adjustable Table Feet

Note

Some digitizing applications (typically, non-Windows CAD applications where the tablet is used solely as a digitizer with no mouse functions) may not require the use of the TabletWorks software. If you need to configure your Super L VI for use with a third-party application, please refer to the installation instructions in the *Super L VI User's Guide*, where you will find a complete list of vendor configuration settings.

Note

If your tablet came with a *TabletWorks* CD, install the software first, then set up the hardware connections for USB (or the optional serial), following the instructions below.


Software Configuration

Software drivers provide the communication bridge between your software application and the Super L VI. The GTCO CalComp-supplied *TabletWorks* CD supports *reduced functionality Wintab* and *TabCon*-compatible applications. If you're not sure about your application's driver requirements, contact your application vendor.

Installing the Driver


Insert the CD into the CD-ROM drive on your computer and follow the onscreen prompts to complete the driver installation. If the CD doesn't *autorun*, click on the **Start** button on the Windows Task Bar and select *Run* from the menu. Type `X:\setup.exe` (X represents the CD drive letter).

Hardware Configuration

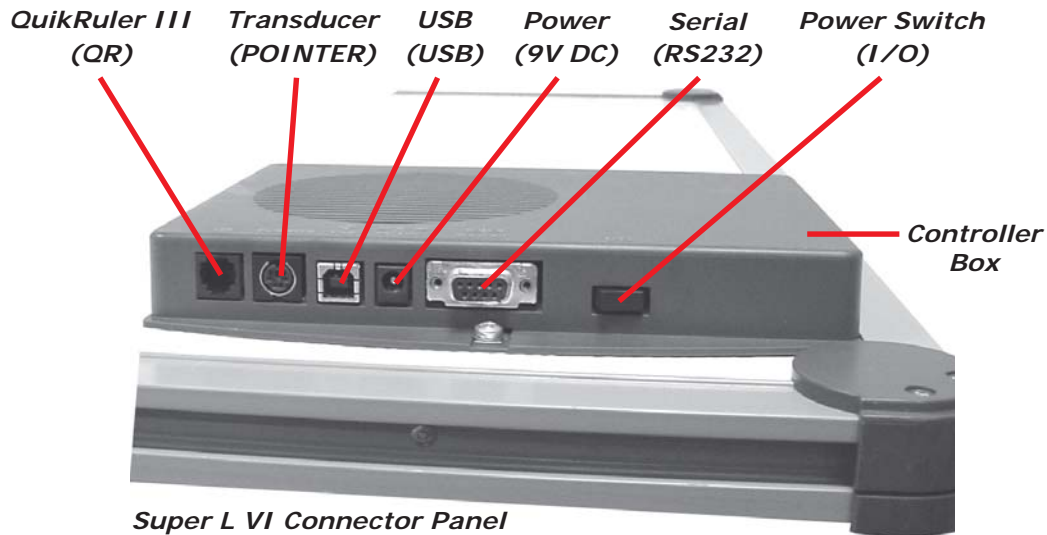

Connect *only* USB or the optional serial—not both.

USB Connection –With *TabletWorks* CD only–

- 1 Connect the corded transducer – cursor or pen – to the appropriate jack on the digitizer’s Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 2 Connect the USB interface cable to the USB jack on the Super L VI Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 3 Connect the other end of the USB cable to any one of the USB ports  on your computer or USB hub. Turn the Power Switch on the Connector Panel on. The digitizer will beep four times, indicating it has power.



Power is supplied through the USB port. No additional power source is needed for this installation.

- 4 If Windows displays the *Found New Hardware* prompt, follow the onscreen instructions to finish the *Found New Hardware* process.

Optional RS232 Serial Connection

- 1 Connect the corded transducer – cursor or pen – to the appropriate jack on the digitizer’s Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 2 Connect the RS232 serial cable to the serial jack on the Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it. Connect the 9-pin connector of the serial cable to the serial port on your computer.
- 3 Plug the power supply into an AC outlet. Connect the power supply to the appropriate jack on the Connector Panel. Turn the Power Switch on. The digitizer will beep four times, indicating it has power.
- 4 To prepare the digitizer for driver support, use the transducer to click on the **S 0 1** buttons on the SuperSet Menu. If you are using a cordless transducer, press a button to take it out of *Sleep Mode* before clicking on the SuperSet Menu buttons.
- 5 Restart your computer.